


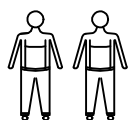


For. Every. Body.

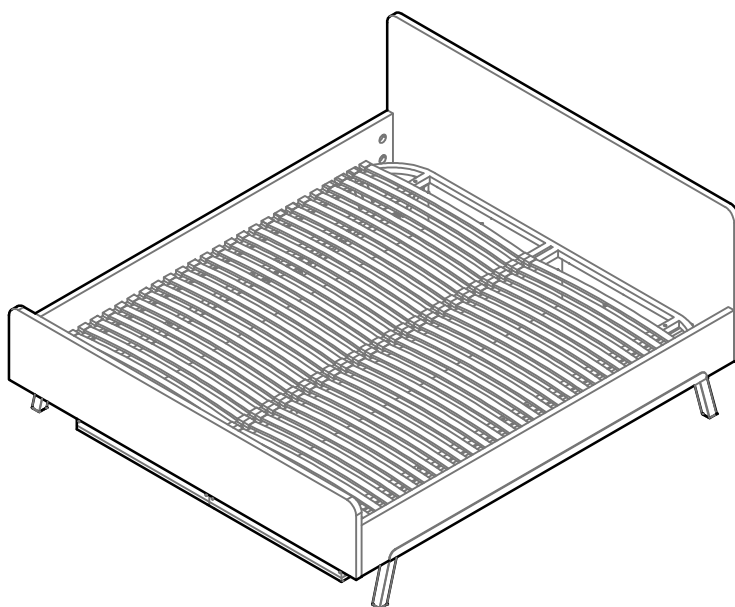


① (X1)

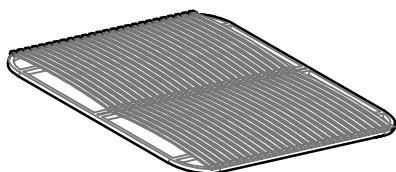


BED BOTTOMS SET

② (X2)

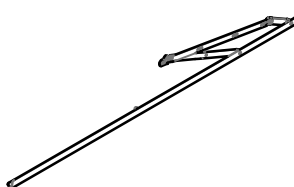


MECHANISM

③ (X2)

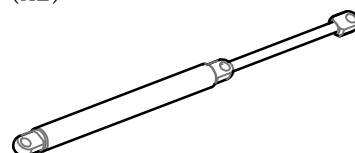


GAS LIFT

④ (X1)

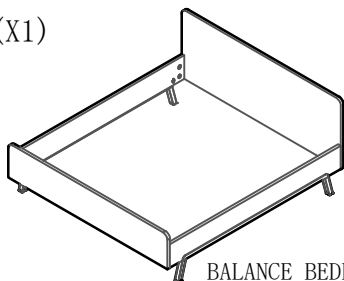


BALANCE BEDFRAME

⑤ (X1)

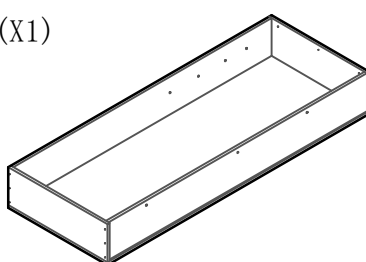


STORAGE BOX - LEFT

⑥ (X1)

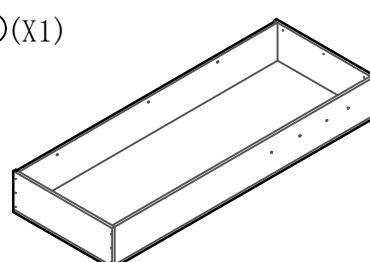


STORAGE BOX - RIGHT

A (3pcs)



SPACER
16MM THK

B (2pcs)



SCREW
M8X80

C (3pcs)



ALLEN BOLT
M6X50

D (4pcs)



SCREW
M8X45

E (18pcs)



SCREW
M8X25

F (6pcs)



SCREW
M8X15

G (6pcs)



TORX WOOD
SCREW
M5X40MM

H (6pcs)




M8 NUT

I (1pc)




FABRIC
LOOP 64CM

J (2pcs)




U-PROFILE


For. Every. Body.

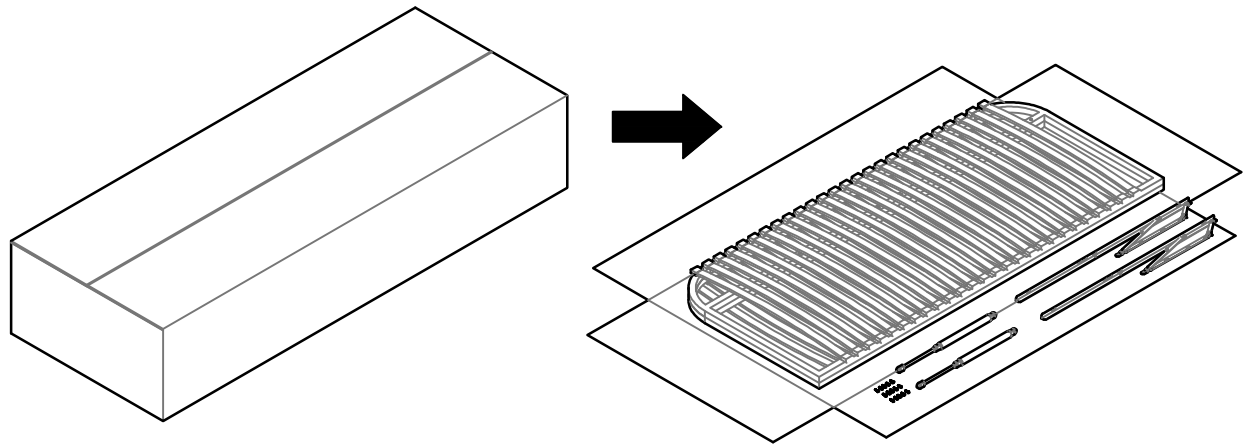

UNBOX BED BOTTOMS SET PACKAGE


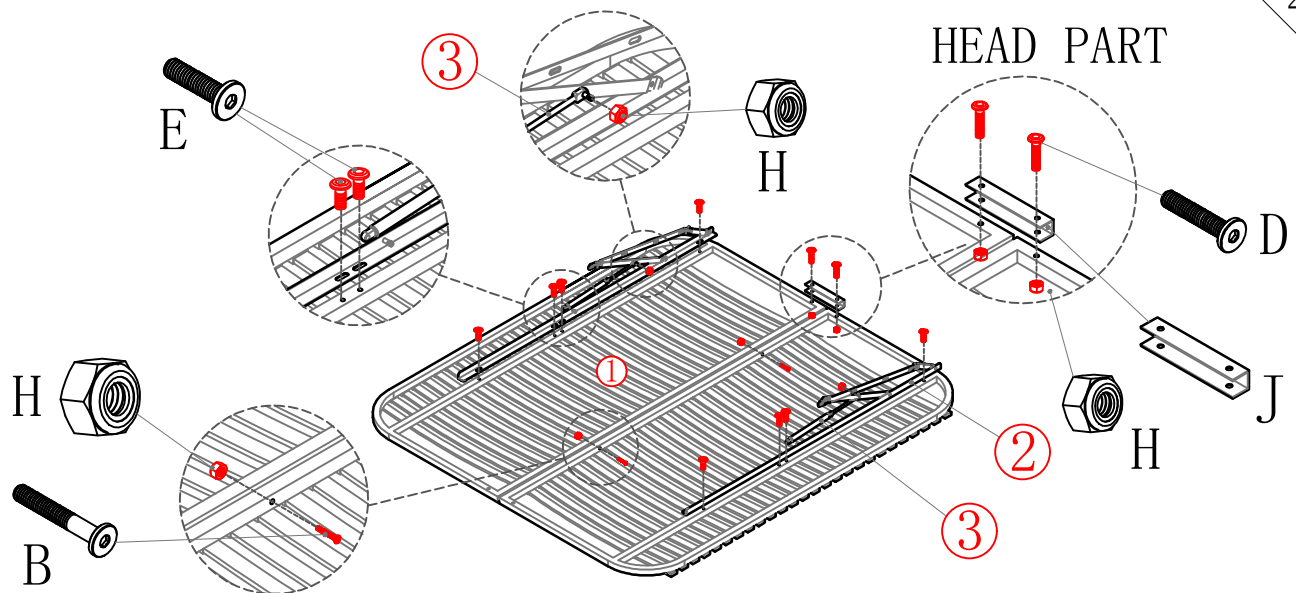


BED BOTTOMS MECHANISM INSTALLATION

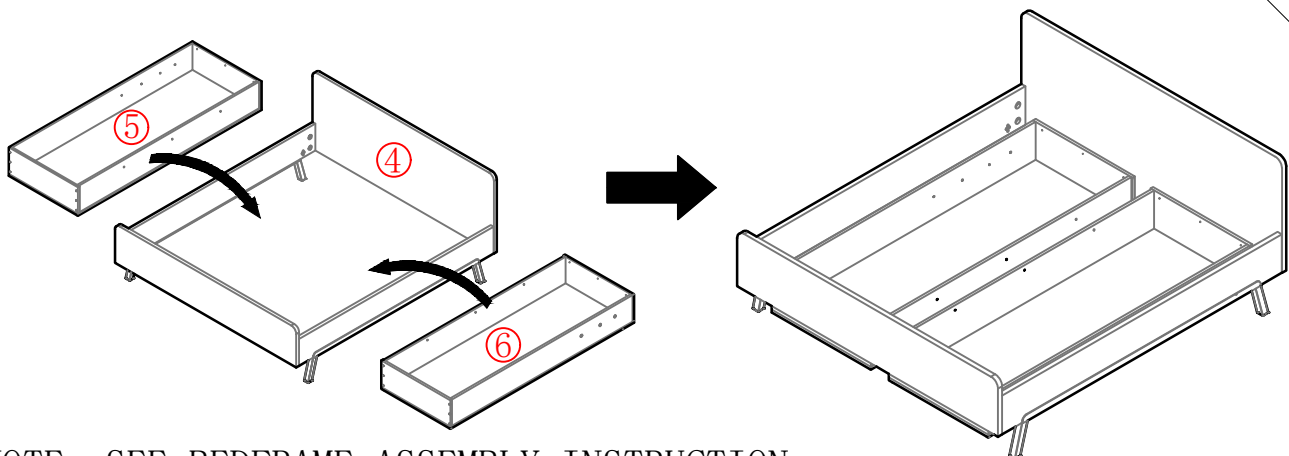


NOTE: SEE BEDFRAME ASSEMBLY INSTRUCTION

4

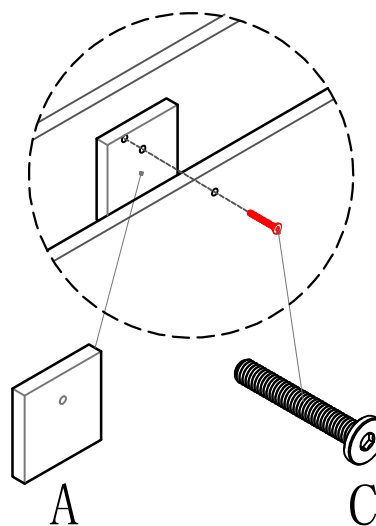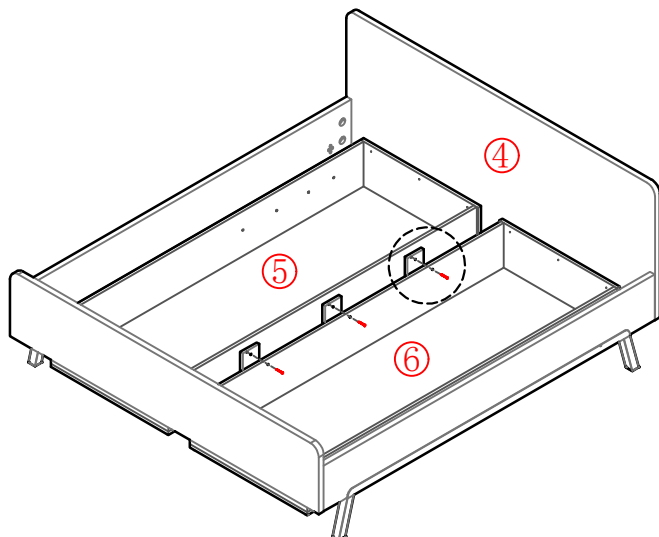



STORAGE BOX INSTALLATION

5

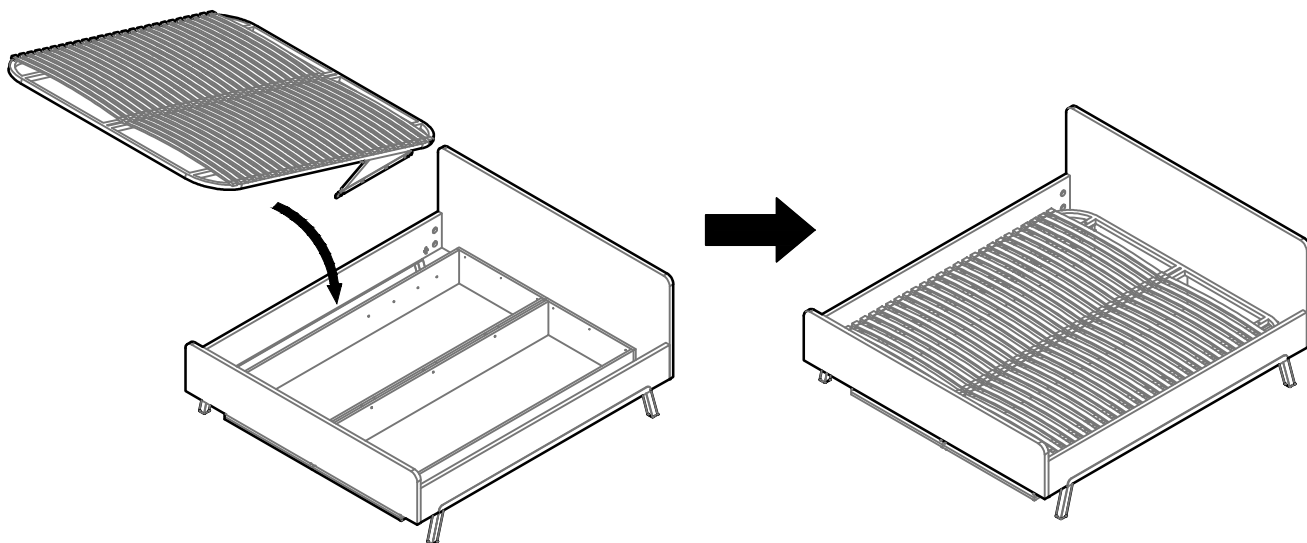


6

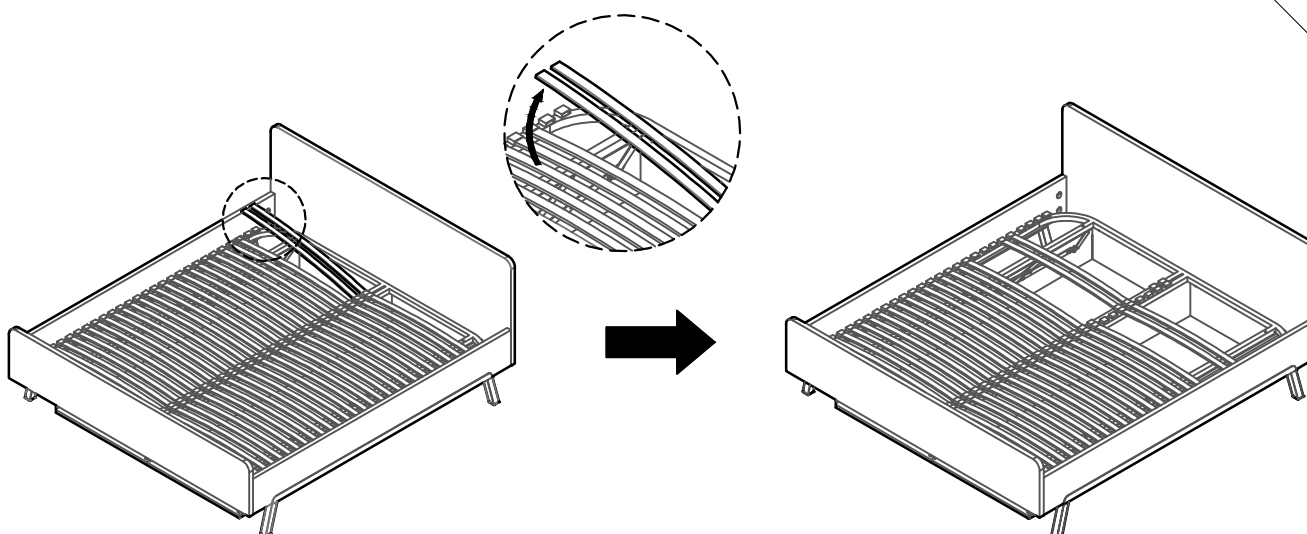


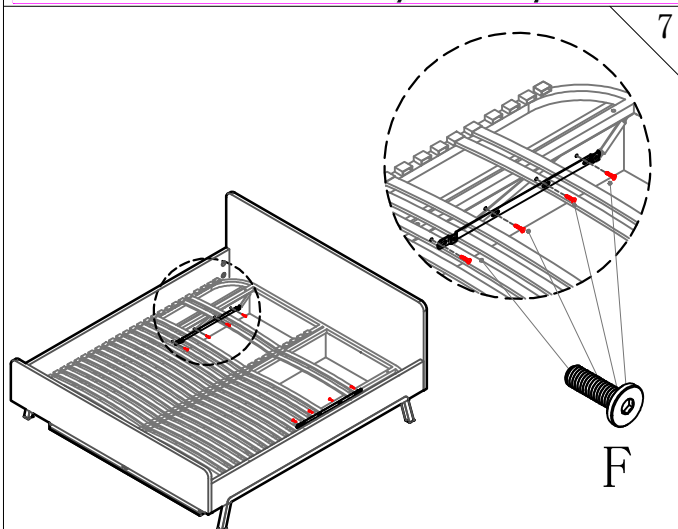


MECHANISM INSTALLATION

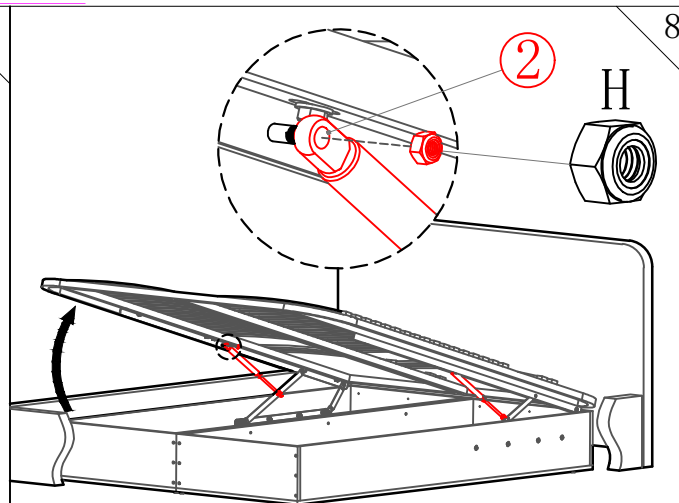


GAS LIFT INSTALLATION

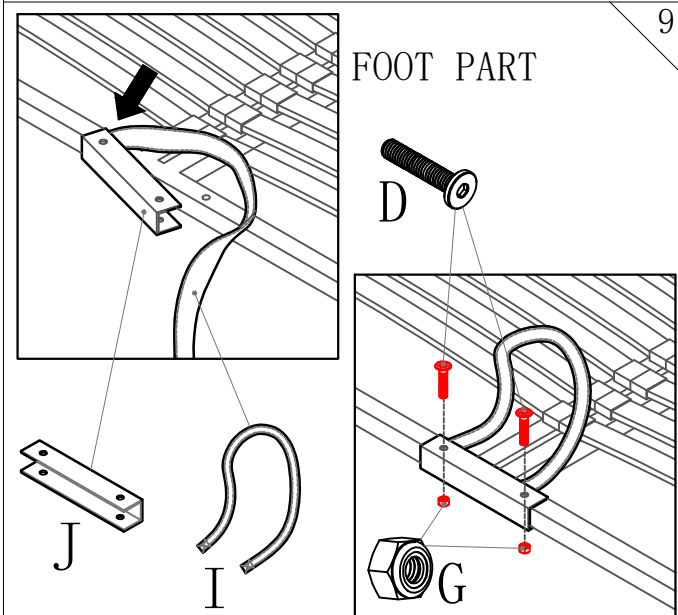

FABRIC LOOP INSTALLATION

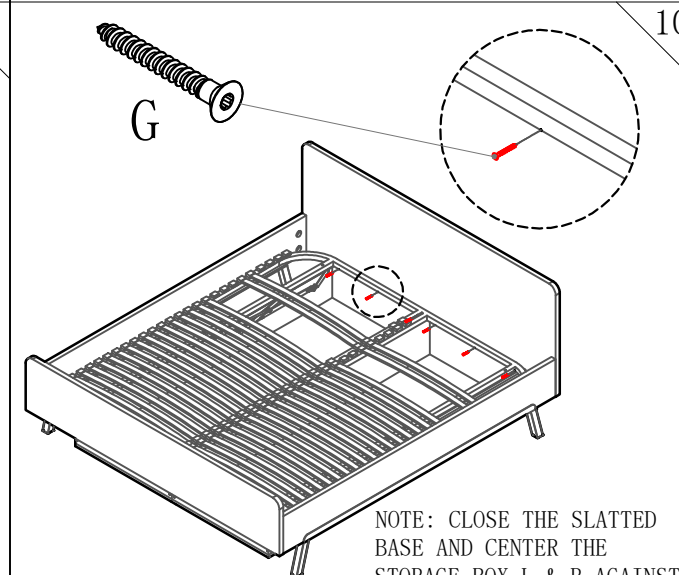

NOTE: CLOSE THE SLATTED BASE AND CENTER THE STORAGE BOX L & R AGAINST THE BEDFRAME BEFORE SCREWING THEM TO THE HEADBOARD

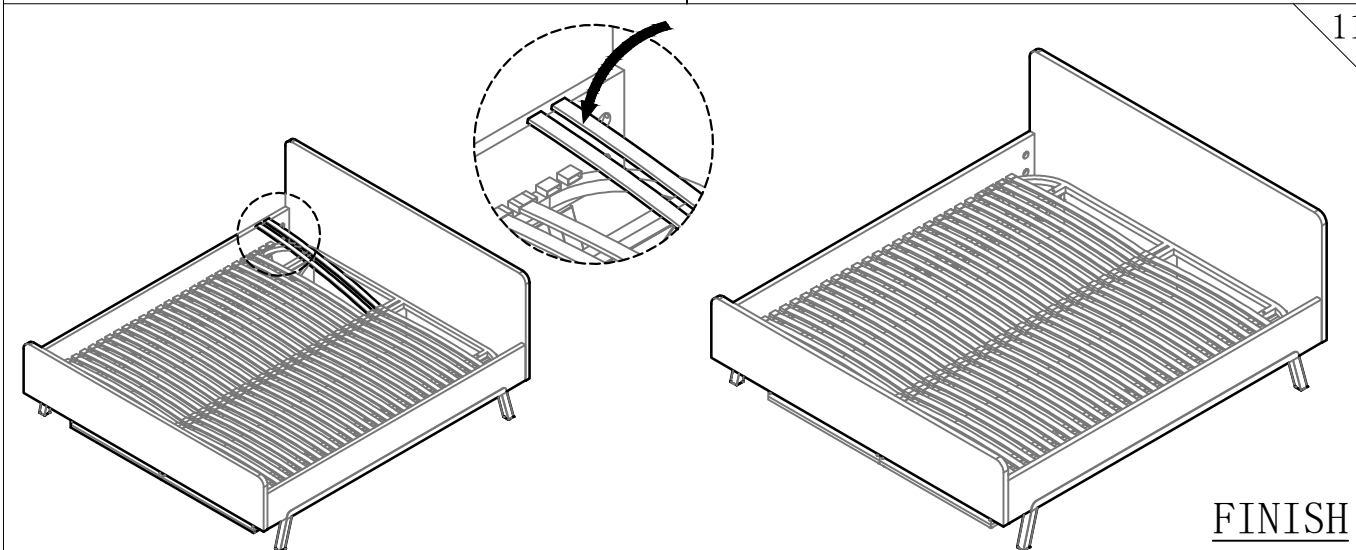

FINISH